




# RTD EL-05-M

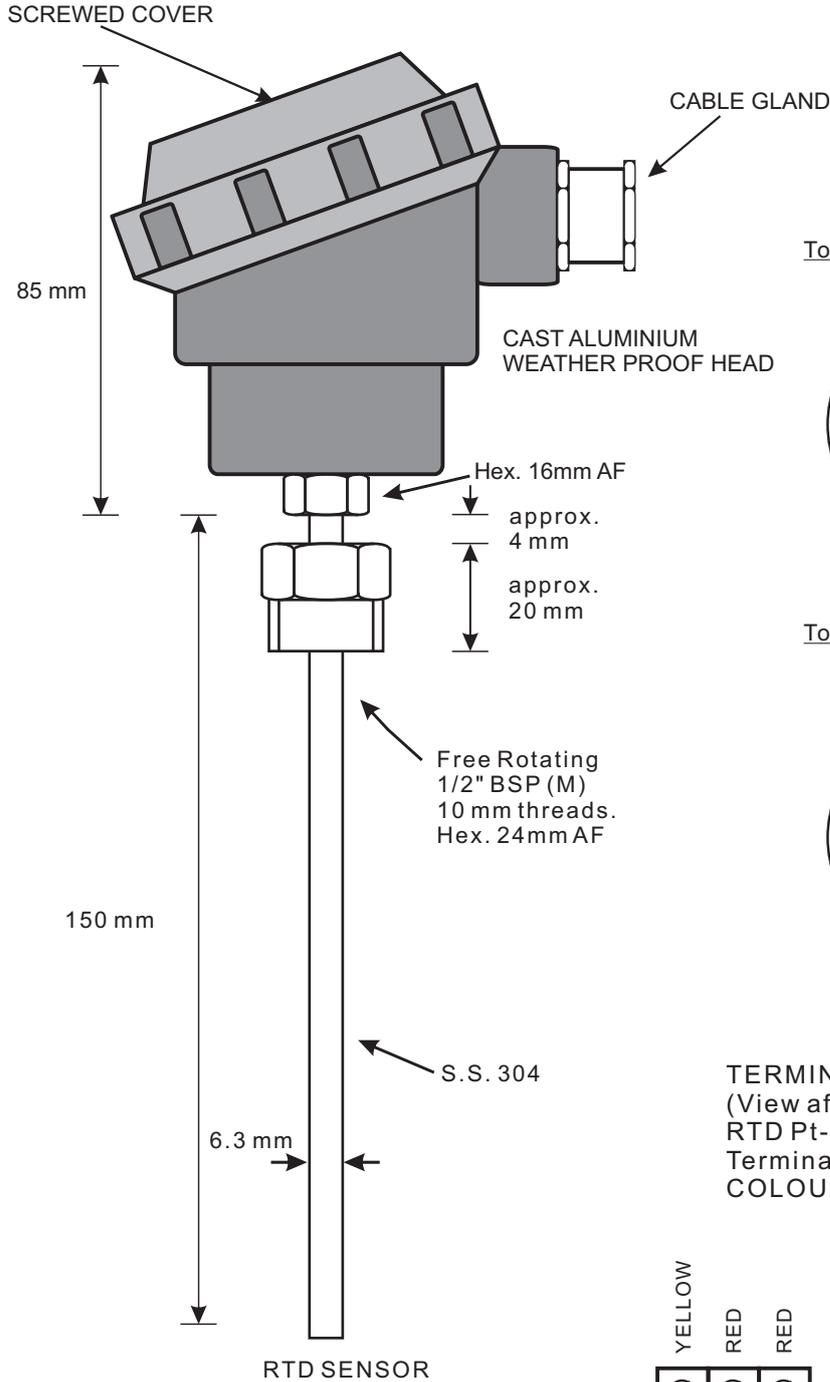


Top View for Terminal plate for RTD EL-05-MS

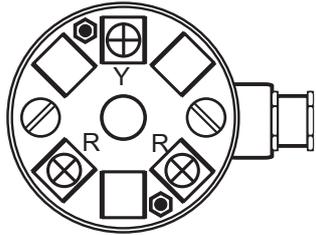

Top View for Terminal plate for RTD EL-05-MD

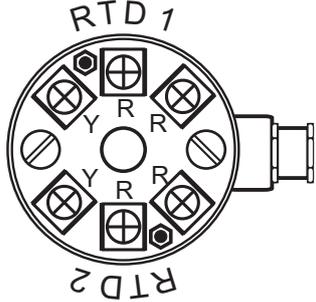

**TERMINAL ARRANGMENT**  
 (View after opening top cover)  
 RTD Pt-100 (IEC-751)  
 Terminals are identified by COLOUR DOTS as shown below.

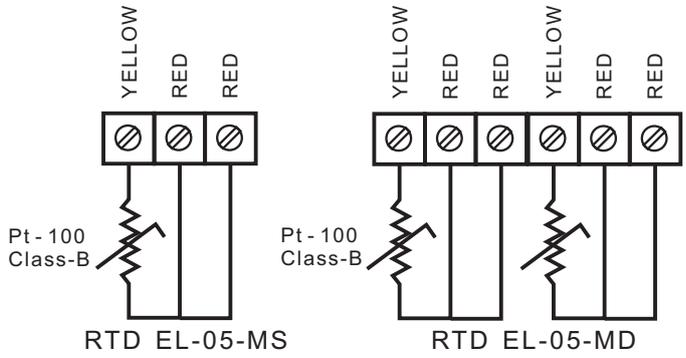

- Notes : 1) This RTD is to be installed on transformer using RTD pocket.  
 2) Please make sure to keep atleast 250mm clearance above the pocket to fit / replace the sensor.

 <b>EMBELINK TECHNOLOGIES</b>	<b>Title</b>		<i>Details of RTD sensor type EL-05-MS &amp; EL-05-MD.</i>		
	<b>Drwn. by</b>		<b>Drg. No.</b>	<i>EL20073106</i>	
	<b>Chk. by</b>		<b>Rev. No.</b>	<i>00</i>	<b>Rev. Date</b>